How to remove your hard drive from your PUTER PARTS computer


Tools needed:

#2 Standard Phillips Screwdriver

Step 1. Remove the screws on the back of your computer.

If you are not sure which side to remove, peak through the vent holes in your computer to see if you can see a hollow shell with parts pointing upward. You should remove the side that allows access to the parts easily.


If we pretend the parts inside your computer is a city, you want to remove the side that would be in the sky

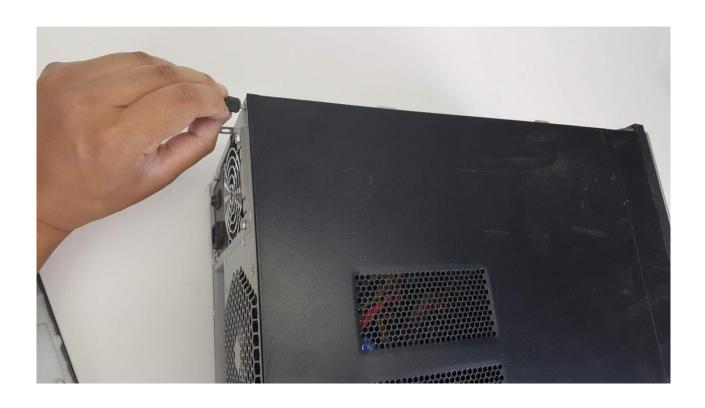

Step 2. Remove the cover exposing the computers internals




Step 3. Locate the Hard Drive

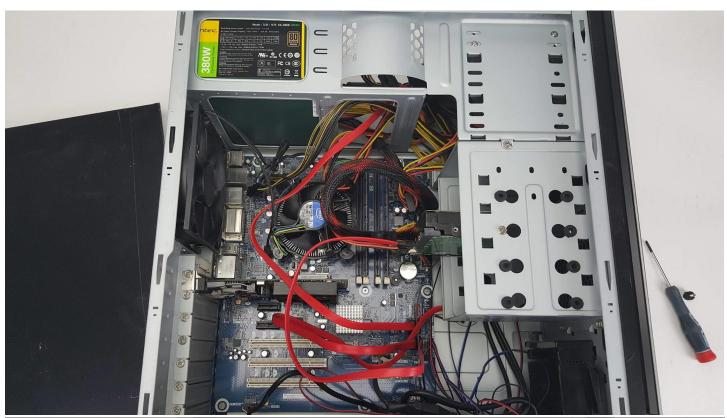





Step 4. Unplug the hard drives connectors

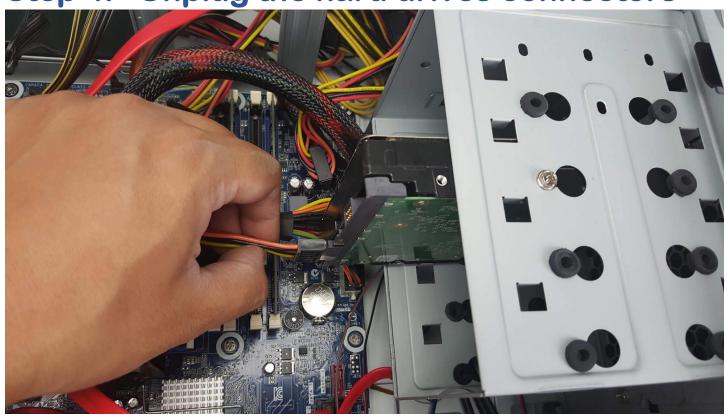

Step 5. Remove any mounting screws with your #2 screw driver

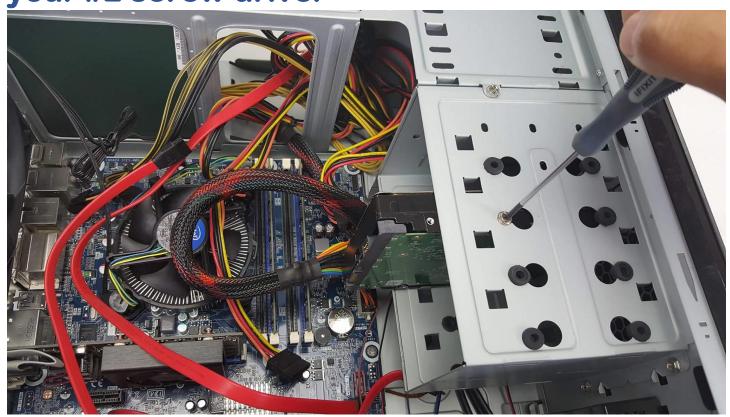

Step 6. Remove the Hard drive

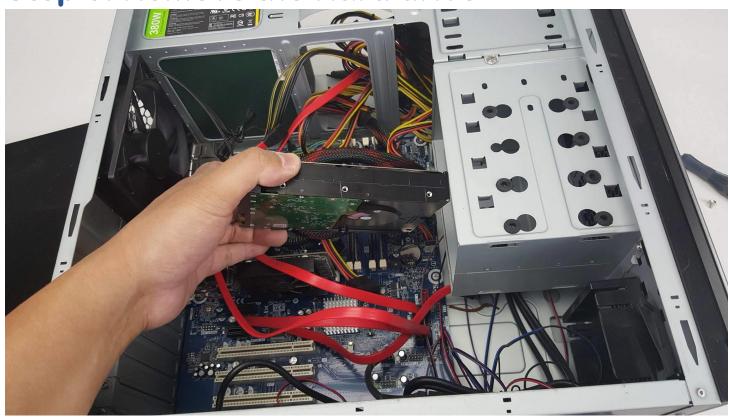



Step 7. Take note of the make and model of the hard drive, and the type of connector.

